

**Hydrostatic
Level
Transmitter**

The Hydrostatic Level Transmitter located on top of the tank transmits tank fluid head pressure data to the Base Unit Wireless Gateway. The tank fluid head pressure is displayed on the local 4" display using serial Modbus RTU communications.

